



1

# Opening and Closing the Camera

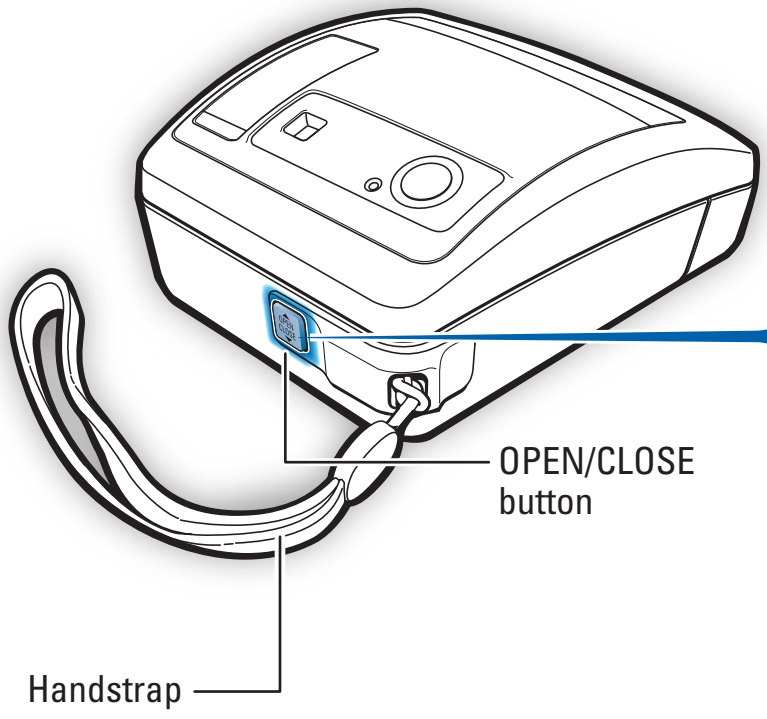


## To attach the handstrap


Push small loop through strap hole.

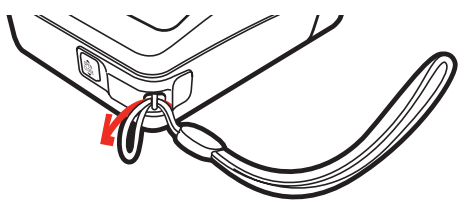

Pull wide end of strap through small loop.

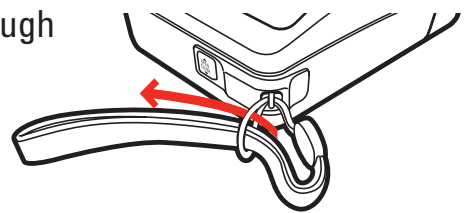


## To open the camera

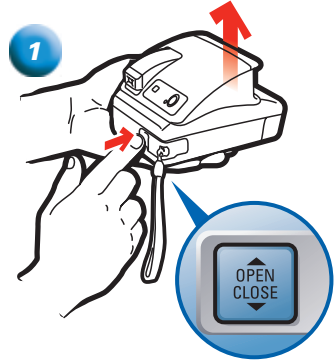


Hold camera as shown. Press the OPEN/CLOSE button. The camera opens automatically.

## To close the camera

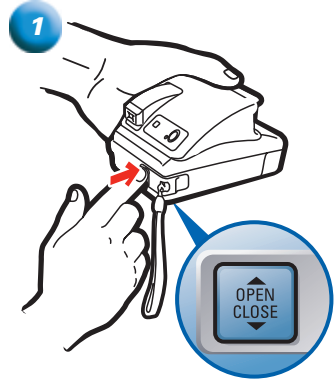


Hold camera as shown. Press and hold the OPEN/CLOSE button

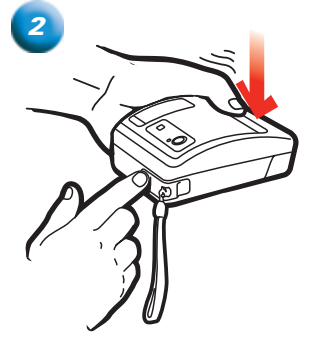


Press down on the camera as shown to close camera.

 **DO NOT force the camera open or closed. Damage to the camera may occur.**

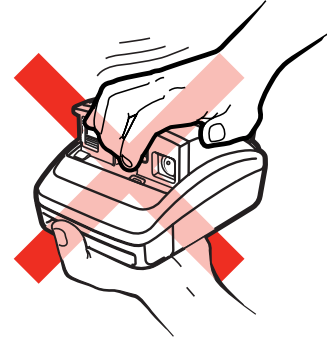

## 2


### Loading and Unloading the Film

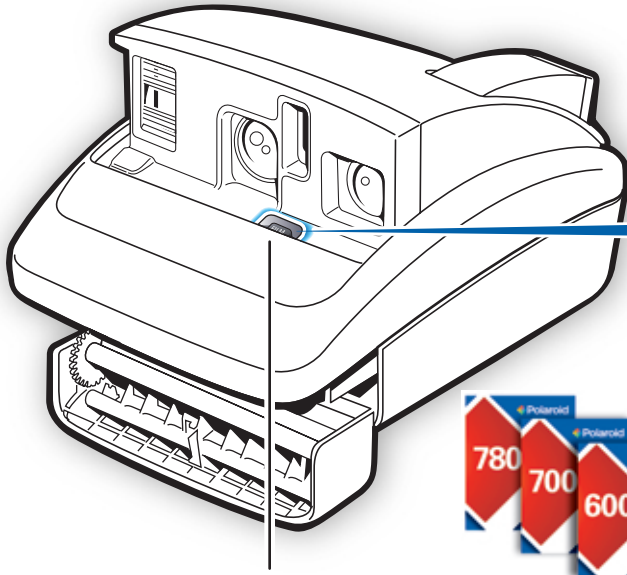

Film door release button



Use Polaroid film

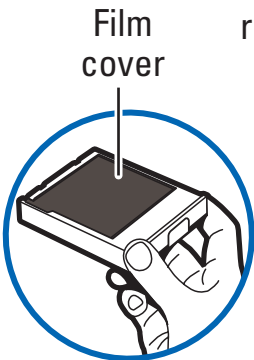

**DO NOT touch the film cover. Hold film by the edges as shown.**




**DO NOT remove the tab. Use this tab to remove empty film pack.**


Tab





**The film pack contains a battery that powers the camera.**

#### To load film

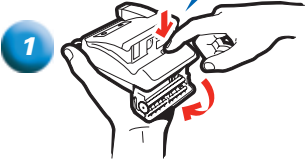


- 

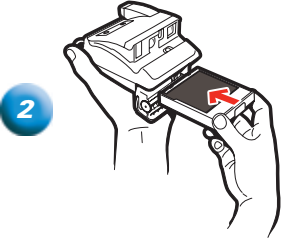1 Press the film door release button to open the film door.
- 


2 Hold film by the edges and insert the film pack as shown.
- 

3 Close the film door. Film cover ejects automatically.





The film counter shows 10.

#### To unload empty film pack

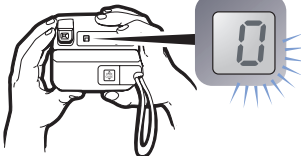

The film counter shows 0 when the film pack is empty.

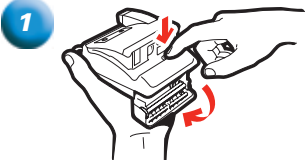
- 

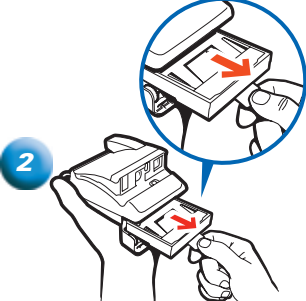1 Press the film door release button to open the film door.
- 

2 Pull the tab to remove the empty film pack.

3


Taking Pictures

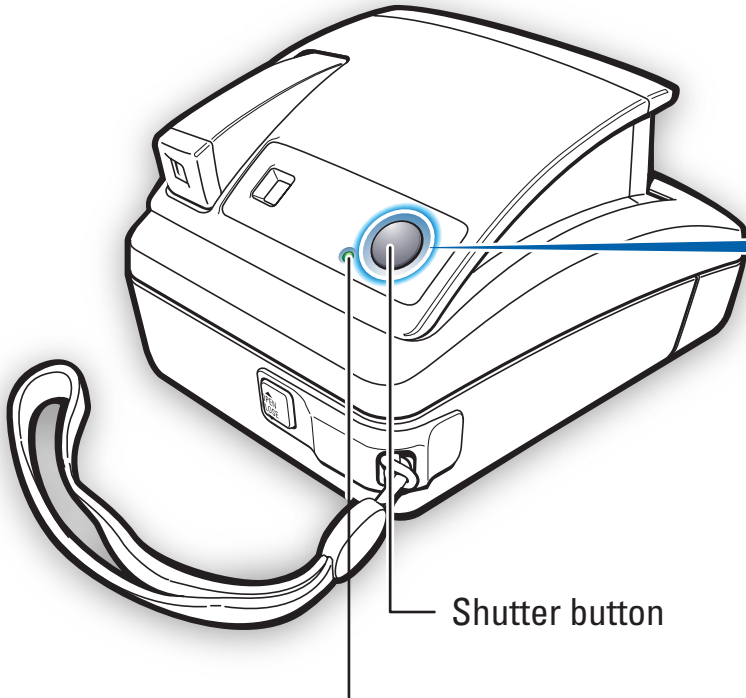

Flash Ready light

A steady green light indicates that the flash is ready. If green light is off and camera shuts off, lightly touch the shutter button or close and reopen camera to turn on flash.

To take pictures

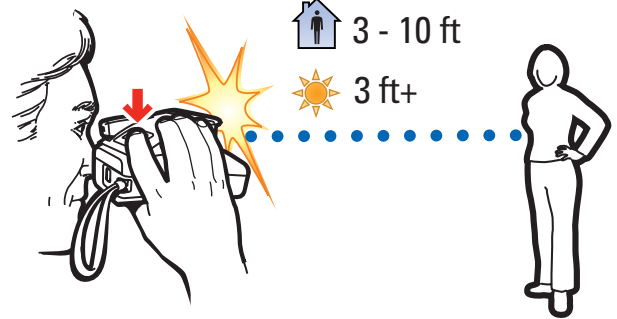

Frame your subject in the viewfinder. Press the shutter button. The picture automatically ejects from the front of the camera.




For indoor pictures, stand between 3 feet to 10 feet from the subject. The flash range is 10 feet.



For outdoor pictures, stand at least 3 feet from your subject. There is no distance limit for outdoor pictures.




**DO NOT** pull picture from the camera.

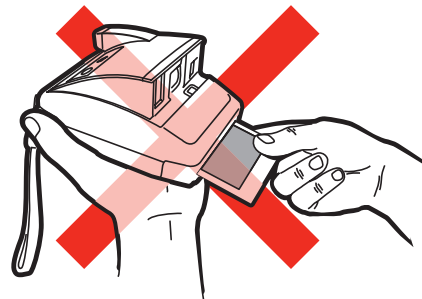

\* Refer to *Guide to Better Pictures* on page 4 for more information.

## Guide to Better Pictures

### Indoor Pictures (beyond flash range)

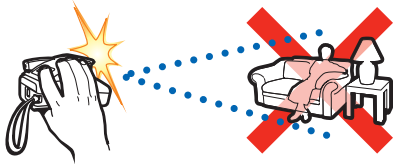

10 ft+

Do not stand further than 10 feet (beyond flash range) from your subject.


### Indoor Pictures (within flash range)



3 - 10 ft


Stand at least 3 feet from your subject and no further than 10 feet (beyond flash range) from your subject.

### Outdoor Pictures (sun behind subject)

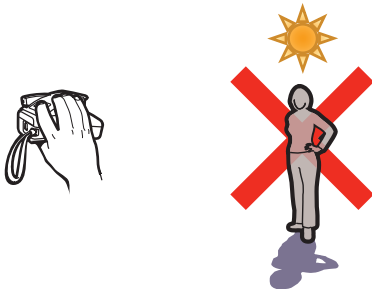


Do not take picture with the sun directly behind your subject.

### Outdoor Pictures (sun away from subject)

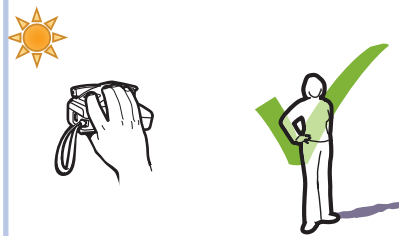


Take picture with the sun away from your subject.

### Developing Pictures

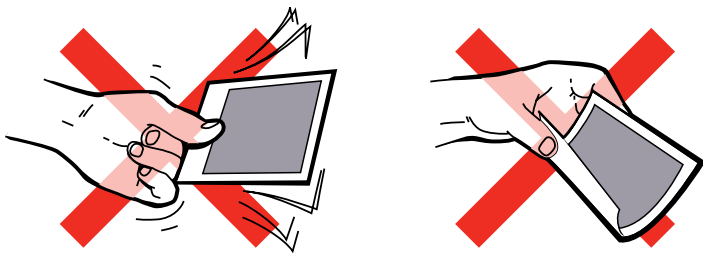

Do not shake or bend developing pictures.


### Cold Temperatures

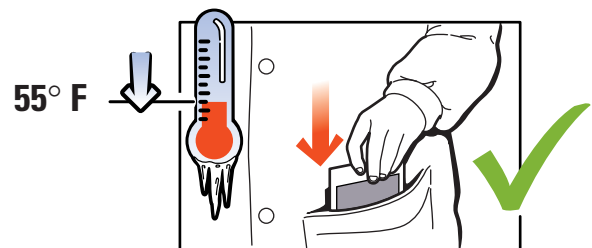

If temperature is below 55° F place developing picture in warm location such as your pocket.


## Camera Maintenance

### Spots and Banding on Picture

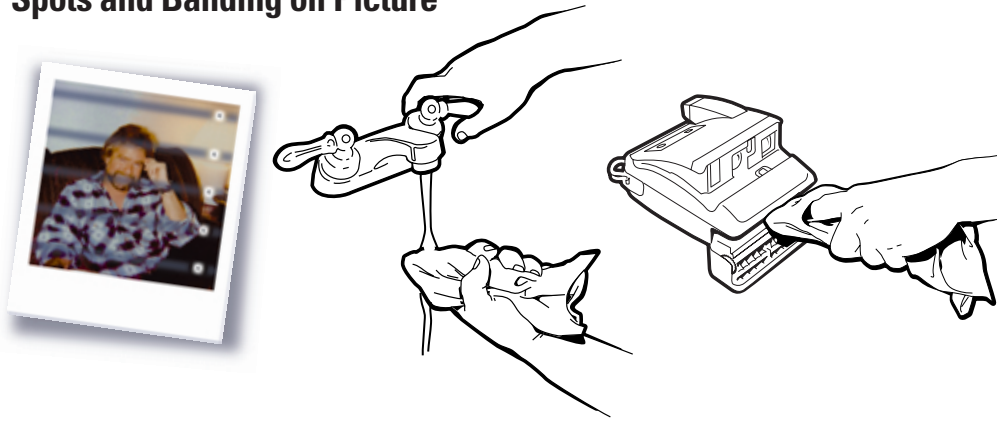

If spots or banding appear on photos, camera may have dirty developer rollers. To clean developer rollers dampen clean cloth with tap water. Open film door and thoroughly clean rollers. If film is in camera, clean rollers in dimly lit area.

### Cleaning Lens

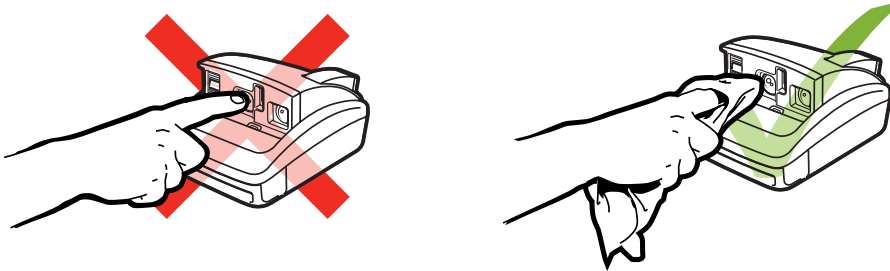

Do not touch lens. Clean camera lens with a soft, lint-free cloth.

### One Year Limited Warranty

Polaroid will, at our option, repair or replace any camera found defective in manufacture within the one year warranty period, provided that the camera is returned to a Polaroid dealer or office. The warranty period is determined by the date of camera purchase. To verify the warranty period, keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture. This warranty does not apply to damage caused by accident, misuse or tampering with the camera, and a charge will be made for such repairs. **This warranty excludes all consequential damages, except in jurisdictions not allowing such exclusions or limitations. Warranty may vary according to applicable local law.**

### Caution

This camera is battery operated. Closely supervise children when camera is operated by them or used in their presence. **To avoid electrical shock, camera should not be exposed to or immersed in water or other fluids, disassembled or operated if dropped or damaged. Contact a Polaroid Service Centre for repair information.**

© 2004 Polaroid Corporation ®; TM: Polaroid and pixel design and Polaroid One 600.